


Brock's PERFORMANCE

Brock's Performance Products • 4064 East Patterson Road • Dayton, OH 45430 • Phone: 937-912-0054 • Fax: 937-912-0062

Installation Instructions For BST Rear Wheel

All BST wheels mount to motorcycle with OEM specifications, consult a factory service manual for removal, installation, and torque specifications.

SPROCKET INSTALLATION

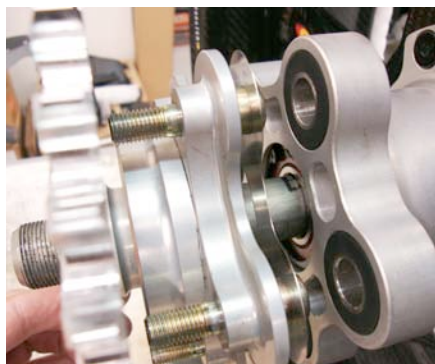

Place sprocket onto the sprocket carrier over the center hub and bolts.

Install the (5) sprocket mounting locknuts. It will be necessary to hold the bolts with an 8mm hex wrench from the rear.

Torque the (5) sprocket locknuts to 29.5 foot pounds (40 Newton meters) while holding the bolts with an 8mm hex wrench from behind as shown.



DO NOT ATTEMPT TO TORQUE SPROCKET BOLTS WITHOUT HOLDING FROM REAR.

Brock's Performance will NOT warrant any BST wheel that is damaged by improper installation of drive sprocket.




SPROCKET CARRIER GAP

After installation of your BST wheel, there should be a gap between the sprocket carrier and the wheel hub (area where the steel shim is located). The gap should measure $0.8 \text{ mm} \pm 0.2 \text{ mm}$ (.0314in \pm .008in) not including the shim. There is space to check the gap with a feeler gauge without interference from the shim.

*****MINIMUM TIRE PRESSURE IS 12 PSI*****

Lower pressures may not seat the bead firmly and the wheel will spin inside the tire on hard launches.

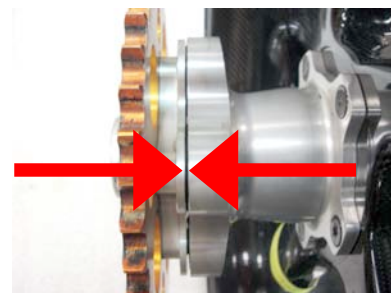

Brock's Performance Products are designed for Closed-Course Race Track use **ONLY**.
Brock's Performance Products policies and warranty information: www.BrocksPerformance.com
For additional information: Check our [Information Forum](http://www.BrocksPerformance.com) at www.BrocksPerformance.com
E-mail advice@BrocksPerformance.com or call the Order Line 937-912-0054.

All products manufactured by Brock's Performance are guaranteed against defects in material and workmanship. Defective products will be replaced or credit given at our option. Brock's Performance makes no other warranty of any kind, expressed or implied. Brock's Performance will not be held liable for any loss or damages incidental, direct or consequential from the use of, or inability to use, Brock's Performance products. Use other than specified, any alterations to product, or product mounting area voids warranty. Brock's Performance products are guaranteed in accordance with the manufacturer's own terms of warranty.